


Remarque® Installation Guide

FIXING TYPES:

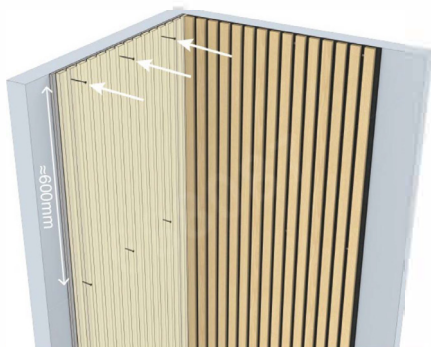

A. Screw acoustic panels directly to the wall.



B. Attach acoustic panels to the wall with construction adhesive.

For more information from our expert team on our natural, unique and beautiful timber veneers of exceptional quality:

VISIT
matildaveneer.com.au
EMAIL
hello@matildaveneer.com.au
CALL
+ 61 7 5594 0655

   /matildaveneer
matildaveneer.com.au

INSTALLATION METHOD:

Step 1: Prepare all the tools and materials you need.

Step 2: Measure the height of the wall.

Step 3: Cut the Remarké® panel according to the height of the wall.

Step 4: Place the first Remarké® panel on the wall and screw or glue in place.

Step 5: Install Remarké® panels in turn across the wall. Measure the remaining width.

Step 6: Cut the Remarké® panel to the remaining width.

Step 7: If required, use a single Remarké® batten to finish the edge. Apply glue to the edge of the Remarké® panel and stick the batten firmly in place.

Step 8: For an external corner, use a Remarké® batten as per Step 7.

Step 9: Complete all remaining walls.